









## Tips for using your TiVo® remote control while using the TiVo program guide

When you're using the TiVo program guide, the remote control buttons do the following:

### 1 INFO:

- Press the **INFO** button to access Guide Options.

**TIP:** In TiVo with HD menus, you can also press the **A** button to access Guide Options.

### 2 CHANNEL UP/DOWN:

- The **CHANNEL UP/DOWN** button pages up or down through lists of programs.

### 3 INSTANT REPLAY:

- Press the **INSTANT REPLAY** button to jump back 24 hours.

### 4 ADVANCE:

- Press the **ADVANCE** button to jump forward 24 hours.

### 5 ENTER/LAST:

- Press the **ENTER/LAST** button to access Guide Options.

**TIP:** In TiVo with HD menus, you can also press the **A** button to access Guide Options.

